

# AIRKRAFT

[www.airkraft.com.tr](http://www.airkraft.com.tr)



marketing@airkraft.com.tr handy: +90 533 776 10 46 Fax: +90 224 261 25 50  
LFT Germany: [www.airsprings.de](http://www.airsprings.de)

## ABOUT AIRKRAFT

Established in Bursa Freezone since 2000, AIRKRAFT produces a wide range of airsprings including Convoluted, Cabin, Seat, Lift-Axle and Belt Tensioner air spring types. At the end of 2007, AIRKRAFT moved to its new plant to reach a total of 6.000m<sup>2</sup> covered area, in three locations.

Being a leader in the domestic market since 2000, Aircraft today exports approximately 90% of its production to more than 70 countries worldwide.

Built upon Akta• Group tradition and experience, which is celebrating its 70<sup>th</sup> anniversary this year, we are taking secure steps towards our goal of being a world known company. In order to secure our product quality and these steps, we have upgraded our quality certificate to ISO TS 16949. Moreover, supplying all our raw materials from the Group, provides us a guaranteed chain of production until the finished product and maximum traceability down to the root.

Along with a vast number of tests done on raw materials (adhesion, ageing, resistances etc.), Aircraft also cinches the standard quality by applying many in-house tests such as impermeability, force, burst, dimension changes, hysteresis, tragkraft etc.

Cultivated by big name customers across the world including OEM companies, we are proud to bring OE attention and quality to AM customers.

## CONVOLUTED AIRSPRINGS

Classified as single, double and triple, convoluted airsprings increasingly replace pneumatic cylinders in the world industry.

With higher course length, compactness, ease of usage and low maintenance costs, convoluted air springs offer the performance in lifting, compression, suspension and eliminating vibration both under vehicles and machines.

Convoluted airspring production in Turkiye first began in the late 70's under Aktas Group flag. Now Aircraft proudly provides local OEM brands as a sole supplier since 2000 as well as aftermarket customers.

## CABIN AIR SPRINGS

Used in the truck and tractors' cabin as four point suspension, the cabin airsprings provide much more comfort in comparison to its preceeders, steel springs. Combining traditional shock absorbers with air springs instead of coil springs, this hybrid solution to suspension significantly eliminates vibration.

Since 2000, Aircraft supplies cabin airsprings and sole sleeves to leading European shock absorber producers.

## SEAT AIR SPRINGS

Drivers' seat air springs provide a new breed of seat suspension, lowering fatigue, and health risks frequently faced by drivers. Eliminates the vibration for the most important part of the truck, the driver, and keeps the seat at an adjustable height at all times.

Besides supplying the aftermarket, Aircraft also supplies leading global seat producers.



ISO/TS 16949





<b>121101</b>		VEHICLE	FRONT REAR
SACHS	481002	SCANIA 3 SERIES	<b>SCANIA</b>
OEM	1348121/ 1314278		
CHASSIS NO		CR SERIES	



<b>121201</b>		VEHICLE	FRONT REAR
SACHS	557001	SCANIA 4 SERIES	<b>SCANIA</b>
OEM	1349840		
CHASSIS NO		CR - CP SERIES	



<b>121202</b>		VEHICLE	FRONT REAR
MONROE	CB0030 / 717262725	SCANIA 4 SERIES	<b>SCANIA</b>
OEM	1476415 / 1381919		
CHASSIS NO			



<b>121207</b>		VEHICLE	FRONT REAR
SACHS	310619	SCANIA 4 SERIES	<b>SCANIA</b>
OEM	1424231		
CHASSIS NO			
		CR - CP SERIES	



**CABIN AIR SPRINGS**



<b>121208</b>		VEHICLE	REAR
MONROE	CB0074	SCANIA R SERIES	<b>SCANIA</b>
OEM	1502468		
CHASSIS NO			



<b>121209</b>		VEHICLE	FRONT REAR
SACHS	312465	SCANIA R SERIES  CR - CP SERIES	<b>SCANIA</b>
OEM	1444016		
CHASSIS NO			



101169 K		VEHICLE	FRONT REAR
SACHS	112320 + 105876	SCANIA 3 SERIES	SCANIA
	105845 + 105875		
	105831 + 481002		
OEM	370227 / 393257 / 550365		
	1116535 / 1117320 / 1117334 / 1117326		
	1314278 / 1331620 / 1331621 / 1331626		
	1331634 / 1331635 / 1348117 / 1348118		
	1348119 / 1348120 / 1348121 / 1348211	CR SERIES	
CHASSIS NO			



201180 K		VEHICLE	FRONT
SACHS	290988	SCANIA 4 SERIES	SCANIA
	557001		
	105872		
OEM	1349840 / 1424228		
	1381904 / 1363122 / 1397396		
		CR - CP SERIES	
CHASSIS NO			

CABIN AIR SPRINGS





201181 K		VEHICLE	REAR
SACHS	557001 + 105873	SCANIA 4 SERIES	SCANIA
	557001 + 290989		
OEM	1382827		
	1389840		
	1424229		
	1349844		
CHASSIS NO		CR - CP SERIES	



202186 K		VEHICLE	FRONT
MONROE	CB0010	SCANIA 4 SERIES	SCANIA
	CB0030		
	717262725		
OEM	1476415 / 1381919		
	1381904 / 1397400		
	1435859		
CHASSIS NO			



<b>202187 K</b>		VEHICLE	REAR
MONROE	CB0009	SCANIA 4 SERIES	<b>SCANIA</b>
	CB0030		
	717262725		
OEM	1476415 / 1381919		
	1435856 / 1382826		
	1381906 / 1382829		
CHASSIS NO			



<b>128001 K</b>		VEHICLE	FRONT REAR
SACHS	310619 + 310620	SCANIA 4 SERIES	<b>SCANIA</b>
	CB0030		
	717262725		
OEM	1424231 / 1505563		
	1502470 / 1502471		
	1502472 / 1502474		
	1595642		
CHASSIS NO		CR - CP SERIES	

**CABIN AIR SPRINGS**







<b>128002 K</b>		VEHICLE	REAR
MONROE	717262778	SCANIA R SERIES	<b>SCANIA</b>
	CB0074		
OEM	1502468		
	1502474		
CHASSIS NO			



<b>128003 K</b>		VEHICLE	FRONT
SACHS	312465 + 290987	SCANIA R SERIES	<b>SCANIA</b>
OEM	1444016 / 1424227		
	1363120 / 1397396		
	1397390 / 1397392		
		CR - CP SERIES	
CHASSIS NO			



<b>128004 K</b>		VEHICLE	REAR
SACHS	312465 + 310620	SCANIA R SERIES	<b>SCANIA</b>
OEM	1444016 1505563		
CHASSIS NO		CR - CP SERIES	



<b>121010</b>		VEHICLE	
MONROE	P2A7C006 / 01764029	SCANIA 3 SERIES	<b>SCANIA</b>
PHOENIX	1C39 a - 245		
OEM	1448573/ 1314278		
CHASSIS NO			





<b>205001 K</b>		VEHICLE	FRONT
SACHS	105392	ACTROS 1831-1860	<b>MERCEDES</b>
OEM	942 890 29 19		
A 942 890 29 19			
CHASSIS NO	1831 S - 1831 LS / 1835 S - 1835 LS / 1840 S - 1840 LS 1843 S - 1843 LS / 1848 S - 1848 LS 1853 S - 1853 LS		



<b>206001 K</b>		VEHICLE	REAR
SACHS	105409 + 290997	ACTROS 1831-1860	<b>MERCEDES</b>
OEM	942 890 02 19		
942 890 60 19 / A 942 890 02 19			
A 943 890 02 19			
CHASSIS NO	1831 - 1860 L/K/S/AK/LL/LS/LLS 2031 - 2053 A/K/S/AK/AS 2531 - 2557 L/LS 2631 - 2658 B/K/L/S/LK/LS 3231 - 3335 A/B/K/S/AK/AS 3340 - 3357 A/B/K/S/AK/AS 4140 - 4148 A/B/K/AK		



<b>207001 K</b>		VEHICLE	FRONT
SACHS	105408	ACTROS 1831-1860	<b>MERCEDES</b>
OEM	942 890 52 19		
	A 942 890 52 19		
CHASSIS NO	1831 S - 1831 LS 1835 S - 1835 LS 1840 S - 1840 LS 1843 S - 1843 LS 1848 S - 1848 LS 1853 S - 1853 LS		



<b>208001 K</b>		VEHICLE	FRONT
SACHS	105414 + 290998 + 311663	ACTROS 1831-1860	<b>MERCEDES</b>
OEM	942 890 53 19		
	942 980 59 19 / 943 890 38 19		
CHASSIS NO	1831 - 1860 L/K/S/AK/LL/LS/LLS 2031 - 2053 A/K/S/AK/AS 2531 - 2557 L/LS 2631 - 2658 B/K/L/S/LK/LS 3231 - 3335 A/B/K/S/AK/AS 3340 - 3357 A/B/K/S/AK/AS 4140 - 4148 A/B/K/AK		





<b>203001 K</b>		VEHICLE	
SACHS	105885	F - 2000	<b>MAN</b>
OEM	81 41722 6048		
81 41722 6051			
CHASSIS NO	18.403 T33 (FRONT - REAR) 19.293 T20 (all) (FRONT - REAR) 19.343 T20 (all) (FRONT - REAR) 19.344 FLL (4x2) (FRONT)		



<b>204001 K</b>		VEHICLE	REAR
SACHS	105856	F - 2000	<b>MAN</b>
OEM	81 41722 6049		
81 41722 6052			
CHASSIS NO	19.273 T3 (all) STEYR: 19 S 29 T03 19.323 T3 (all) 19 S 34 T03 19.293 T3 (all) 35 S 36 T46 19.343 T3 (all) 35 S 41 T46 19.293 FLL (4x2) T20 41 S 36 T46 19.344 FLL (4x2) T20 41 S 40 T46 35.314 VF T26 41 S 41 T46 35.364 VF T26 41 S 46 T46		



206014 K		VEHICLE	FRONT
SACHS	135194 + 135196	TGA	MAN
OEM	85 41722 6008		
85 41722 6014 / 85 41722 6022			
CHASSIS NO	18.280 LL-FLS-FLLS/N 18.530 FLS-FLLS-FLLS/N 26.310 FDS-FDSL-FDSL/M 26.530 FNLS-FNLS-FDLS/M 28.310 FNLC-FNLS 28.530 FNLC-FNLS 33.360 FDS-FDSWW-FDLS 33.510 FDS-FDLS/M 41.480 FVDS-FVDLS 41.460 FVDS-FVDLS STEYR 18 S31-S36-S41-S46-S51 26 S31-S36		



206015 K		VEHICLE	FRONT
SACHS	135195 + 135197	TGA	MAN
OEM	85 41722 6009		
85 41722 6015 / 85 41722 6023			
CHASSIS NO	18.280 LL-FLC-FLLC-FLLC/N 18.510 FLC-FLLC-FLLS/N 26.310 FDC-FDSC-FDLC/M 26.530 FDC-FDLC-FDC/M 33.360 FDC-FDCWW-FDLC/M 33.410 FD-TM-FDK-FDC STEYR 18 S31-S36-S41-S46-S51 26 S31-S36		





206057 K		VEHICLE	REAR
SACHS	135198	TRACTOR	MAN
OEM	81 41722 6057		
85 41722 6006 / 85 41722 6012			
CHASSIS NO			
TGA DX RIGHT (REAR)			
18.280 LL-FLS-FLLS-FLLS/N			
18.530 FLS-FLLS-FLLS/N			
26.310 FDS-FDSL-FDSL/M			
26.530 FNLS-FNLS-FDSL/M			
28.310 FNLC-FNLS			
28.530 FNLC-FNLS			
33.350 FDS-WW-FDLS			
33.531 FDLS-FDLRS-M			
41.480 FVDS-FVDLS			
41.660 FVDS-FVDLS			
TG-A (FRONT)			
STEYR			
18 S31-S36-S41-S46-S51			
26 S31-S36			



206058 K		VEHICLE	REAR
SACHS	135199 + 135200	TRUCK	MAN
OEM	81 41722 6058		
85 41722 6007 / 85 41722 6013			
85 41722 6024			
CHASSIS NO			
TGA DX RIGHT (REAR)			
18.280 LL-FLS-FLLS-FLLS/N			
18.530 FC-FLC-FLLC-FLLW			
26.310 FDC-FDCL-FDLC/M			
26.530 FNLS-FNLS-FDLS/M			
28.310 FNLC-FNLS			
28.530 FNLC-FNLS			
33.350 FDS-FDS-WW-FDLS			
33.530 FDC-FDLC-FDC/M			
TG-L			
7.150 FC-FRC-FLR-FIRC			
7.180 FC-FRC-FLR-FIRC			
10.180 FC-FK-FRC-FRK			
10.240 FC-FK-FRC-FRK			
12.180 FC-FK-FRC-FRK			
12.240 FC-FK-FRC-FRK			
STEYR			
TG-A (REAR)			
18 S31-S36-S41-S46-S51			
26 S31-S36			



<b>121051</b>		VEHICLE	FRONT
MONREO	CB0075	KERAX 97/06	<b>RENAULT</b>
CONTITECH	SZ50-9		
OEM	5010 130 797 G		
		PREMIUM 00-01	
CHASSIS NO			



<b>121052</b>		VEHICLE	FRONT REAR
MONREO	CB0076	MAGNUM AE 96/04	<b>RENAULT</b>
CONTITECH	816-Z		
OEM	5010 320 096 A		
		MAGNUM AE 00/05	
		MAGNUM E-TECH 00/05	
		MAGNUM E-TECH 02/03	
CHASSIS NO		MAGNUM E-TECH 02/03 FRONT	



**CABIN AIR SPRINGS**





<b>121053</b>		VEHICLE	REAR
MONREO	CB0082	G SERIES G 340 Ti	<b>RENAULT</b>
CONTITECH	SZ50-8		
OEM	5010 092 916 E		
CHASSIS NO			



<b>121054</b>		VEHICLE	FRONT
MONREO	CB0083	G SERIES G 340 Ti	<b>RENAULT</b>
CONTITECH	SZ50-10		
OEM	5010 266 845 A		
	5010 313 619 A		
CHASSIS NO			




<b>121414</b>		VEHICLE	FRONT
CONTITECH	SZ50-9 PO2	PREMIUM RVL	<b>RENAULT</b>
OEM	5010 629 414		
CHASSIS NO			



<b>121086</b>		VEHICLE	FRONT
CONTITECH	SK86-10	MAGNUM DXI 12	<b>RENAULT</b>
OEM	5010 491 301		
CHASSIS NO			



**CABIN AIR SPRINGS**

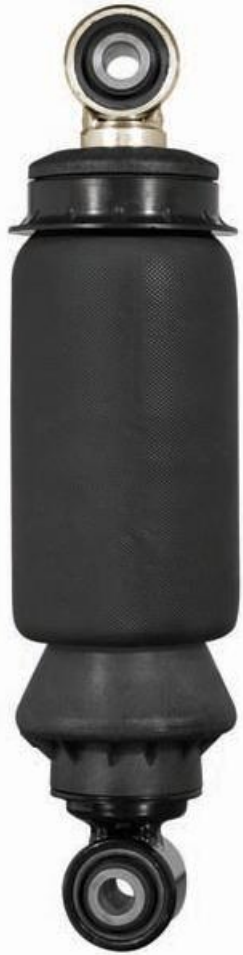

<b>228908 K</b>		VEHICLE	REAR
SACHS	131041 / 310957	PREMIUM VI.	<b>RENAULT</b>
CONTITECH	SZ36-10		
OEM	5010 228 908		
5010 228 908 A / 5010 228 908 B			
5010 228 908 C / 5010 316 783 A			
5010 269 674 / 5010 316 783			
CHASSIS NO			



<b>228849 K</b>		VEHICLE	REAR
MONREO	69849-CB0070	MAGNUM E-TECH	<b>RENAULT</b>
OEM	5010 228 849		
CHASSIS NO			



<b>228879 K</b>		VEHICLE	REAR
SACHS	25376537 + 781700001622	PREMIUM4 40 19T 4X2 ECO HR	<b>RENAULT</b>
OEM	5010 615 879		
		PREMIUM 450 DXI	
CHASSIS NO			



<b>228893 K</b>		VEHICLE	REAR
MONREO	20898055	MAGNUM DXI	<b>RENAULT</b>
OEM	5010 552 241/ 7420898055 7482052893		
CHASSIS NO			

**CABIN AIR SPRINGS**





<b>121055</b>		VEHICLE	FRONT
PIRELLI	I GC 130-30	EUROTECH	<b>IVECO</b>
OEM	41019150 / 8169050		
CHASSIS NO		EUROSTAR	



<b>128010 K</b>		VEHICLE	REAR
SACHS	115743	EUROSTAR TYPE 2	<b>IVECO</b>
OEM	41028764 / 41028763 500377878 / 500348793		
		EUROSTAR	
		EUROTECH	
		EURO TRAKKER	
CHASSIS NO	LD 180 E38 LD 440 E52 TZ MP 180 E34 440 E42 TZ MT 180 E 34R/ 400E 34R MP 190E 31H MP 720E 47 HT		



<b>128011 K</b>		VEHICLE	REAR
SACHS	115731	EUROTECH	<b>IVECO</b>
OEM	500379698 / 5003077338		
	99438514 / 99455937		
	500352808 / 98472734		
CHASSIS NO		EUROSTAR TYPE L	



<b>128012 K</b>		VEHICLE	FRONT
SACHS	310820	STRAIS	<b>IVECO</b>
OEM	500 357 351		
CHASSIS NO	190S31-40-43 AT 260S35/ S40- 40- 43 AT 440S40- 43 AT 190S40- 43- 48 AS		



**CABIN AIR SPRINGS**



<b>128013 K</b>		VEHICLE	FRONT
ARVINMARITOR	908 322 985	STRAIS	<b>IVECO</b>
OEM	500 340 705		
CHASSIS NO	190S31-40-43 AT 260S35/ 40- 43 AT 440S40- 43 AT 190S40- 43- 48 AS		



<b>128014 K</b>		VEHICLE	REAR
ARVINMARITOR	908 322 986	STRAIS	<b>IVECO</b>
OEM	500 340 706		
CHASSIS NO	190S31-40-48 AT 260S40/ 44- 48- 54 AS 440S40- 43- 48- 54 AS		



128015 K		VEHICLE	REAR
ARVINMARITOR	908 323 140	STRAIS	IVECO
OEM	504 060 233		
CHASSIS NO	190S31-40-43 AT 260S35/ 40- 43 AT 440S40- 43 AT		



128016 K		VEHICLE	REAR
SACHS	310821	STRAIS	IVECO
OEM	500 357 352		
CHASSIS NO	190S40- 43- 48 AS 260S40/ 43- 48- 54 AS 440S40- 43- 48- 54 AS		



CABIN AIR SPRINGS





128020 K		VEHICLE	FRONT
MONREO	7172 69 833 + CB0003		FH12
OEM	3172984 / 1629719/ 1629724		
CHASSIS NO	exL1H1	FH16	FH16
	A291152	A257343	
	A544695	B162550	
	B216585	D110198	
	B311773	A257344	
	A257343	A291151	
	B162550	B162551	
	C754615	B216584	
	D100895	D110208	
	2806854	A291152	
		A544695	
		B216585	
		B311773	

**VOLVO**



128021 K		VEHICLE	REAR
MONREO	7172 69 647 + CB0006		FH12
OEM	20427897 / 20721169		
CHASSIS NO	exL1H1	FH16	FH16
	A291152	A291152	
	A544695	A544695	
	B216585	B216585	
	B311773	B311773	
	A544696		
	B311774		

**VOLVO**



<b>128022 K</b>		VEHICLE	REAR
MONREO	7172 62 602 + CB0002		FH12
OEM	1075076 / 1075077		
CHASSIS NO	ex L1H1 C754615 D100895 2806854	FH16 A257343 B162550 D110198	FH16
<b>VOLVO</b>			



<b>128023 K</b>		VEHICLE	FRONT
MONREO	CB0039 + CB0055		FH12
OEM	20453256 / 20889132-1		
CHASSIS NO	ex L1H1 A544696 B311774	L1EH1 A544696 B311774	
<b>VOLVO</b>			





<b>121059</b>		VEHICLE	FRONT	
MONREO	CB0055		FH12	
		<b>VOLVO</b>		
OEM	20453256			
CHASSIS NO	<b>exL1H1</b> A544696 B311774		<b>L1EH1</b> A544696 B311774	



<b>125500</b>		VEHICLE	<b>FREIGHTLINER</b>	
GOOD-YEAR	1S5-005			
		<b>FREIGHTLINER</b>		
OEM				
<b>125503</b>				
GOOD-YEAR	1S4-008			
OEM				



<b>125501</b>		VEHICLE	<b>FREIGHTLINER</b>
GOOD-YEAR	1S5-040		
OEM			
CHASSIS NO			



<b>125502</b>		VEHICLE	<b>FREIGHTLINER</b>
GOOD-YEAR	1S5-045		
OEM			
CHASSIS NO			

**CABIN AIR SPRINGS**

